


SA11QCBT

Standard SpaceArm Quick Change Offset Single Hub Bolt Through

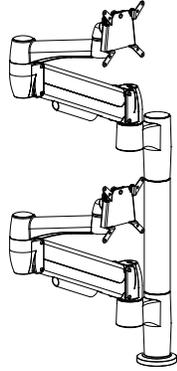

Required Tools:


- 17 mm Socket
- 5mm Allen Key (Included)
- #2 Phillips Screwdriver

Contents:


#	QTY	Part Name
1	01	T-Nut
2	01	Bolt Through Base Plate
3	02	Offset Single Hub
4	01	Stacking Spacer
5	01	8" Extension Tube
6	01	Column Cable Clip
7	01	M10 Washer
8	01	M10 Bolt
9	01	Base Cap
10	04	Plastic Washer
11	08	Monitor Screws
12	02	Standard SpaceArm



Monitor Mounting
Hardware package includes both short and long screws and plastic washers. The long screws & plastic washers should be used for recessed monitor mounts.

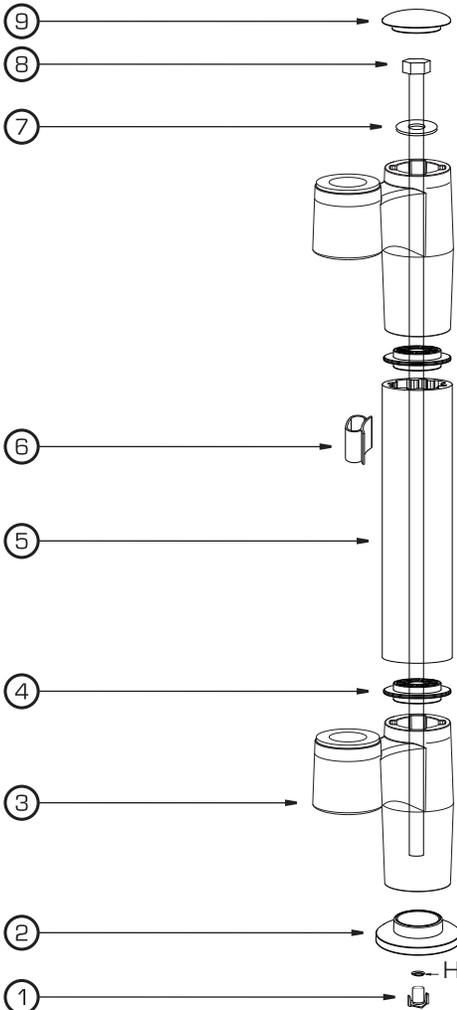

Adjusting Counter Balance
*Required Tool: 5mm Allen Wrench

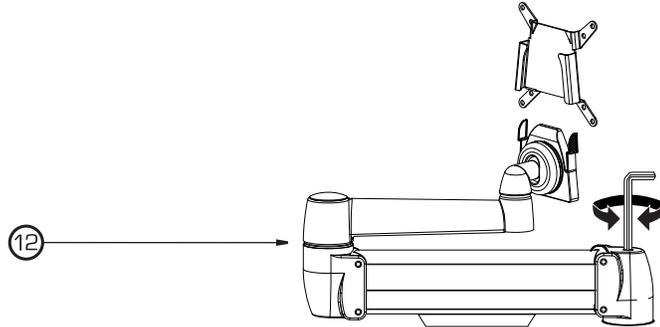

Position Arm so it is parallel to desk surface.
Turn bolt clock wise for lighter monitors.

Cable Routing

